



Creaty




- Main and Sheer Roman Blind both fit in a small space.
- Single ball chain operates main and sheer curtain
- Speed Controller of Creaty Drum type prevents a rapid fall of the shades.


Creaty Lineup

Twin One Chain	Single
	
<p>Features</p> <ul style="list-style-type: none"> • A single chain adjusts the front and back of both screens. • Easy and simple operation with one hand using the built-in Clutch. • The built-in Speed Controller prevents the screen from swooping down. 	<p>Features</p> <ul style="list-style-type: none"> • Easy and simple operation with one hand using the built-in Clutch. • The built-in Speed Controller prevents the screen from swooping down.
<p>Allowable Size Width: 300–4,000 mm (12–158") Height: 480–4,000 mm (19–158") * Depending on the style. * If width is 390 mm (15") or less, height is up to 2,000 mm (79"). * If width is 400–660 mm (16–26"), height is up to 3,000 mm (118").</p>	<p>Allowable Size Width: 300–4,000 mm (12–158") Height: 480–4,000 mm (19–158") * Depending on the style. * If width is 390 mm (15") or less, height is up to 2,000 mm (79"). * If width is 400–660 mm (16–26"), height is up to 3,000 mm (118").</p>
<p>Maximum Shade Weight Up to 8 kg (18 lb) in total of 2 shades *Front and back shade, each one is up to 4 kg (9 lb).</p>	<p>Maximum Shade Weight 5 kg (11 lb) *Including sewing materials.</p>

Allowable Style

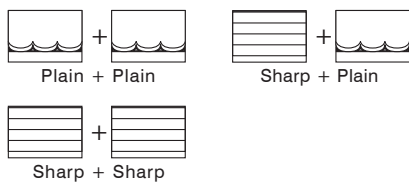

Allowable Style

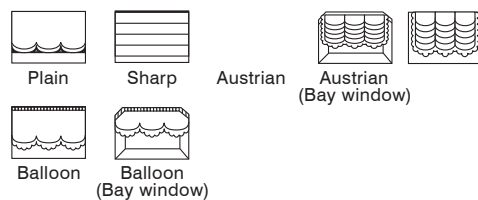

What is Twin?

- A compact head rail with two shades fits neatly on the window frame and yet offers an easy operation.
- Two shades operate with only one Head Rail. A single unit for two shades reduces cost.
- Can be selected operation for right side, left side or both sides (excluding Twin One Chain).



Allowable Products

- Creaty Drum Type Twin One Chain
- Creaty Drum Type Twin
- Creaty Cord Type Twin

Creaty's Unique Features


Creaty Drum Type Twin One Chain

- One Chain Operation

Both the front shade and back shade can be raised and lowered by a single chain.




How to pull up the Front Shade

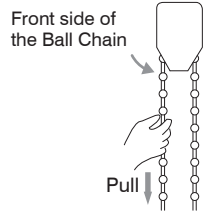

Pull down the front side of the Ball Chain.




How to pull up the Back Shade

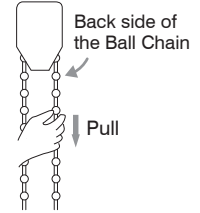

Pull down the back side of the Ball Chain.




How to pull down the Front Shade

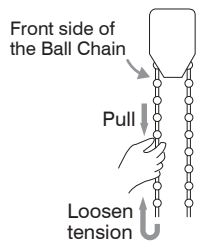

Pull down the front side of the Ball Chain and release it.

How to pull down the Back Shade

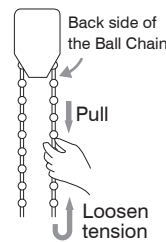


Pull down the back side of the Ball Chain and release it.


- Two-story Structure for Simple and Compact Design

The vertical placement of the front and back rails in a single unit greatly reduces depth.

The discreet gap between the window frame and shade relaxes the cramped feeling of a room.

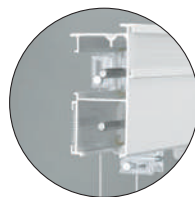

Two-story Structure Twin Head Rail

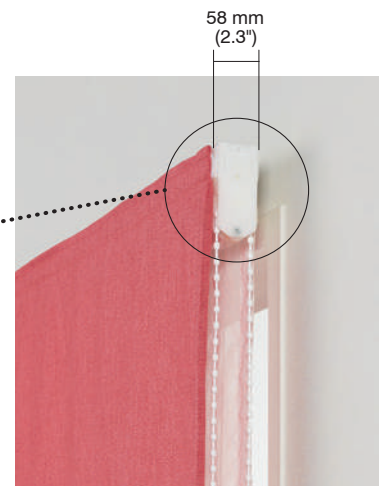

Creaty Parts

Product Name		Drum Type			Product Code	
		Clutch		Product Code		
		Twin	One Chain			Single
Head Rail (4 m)		White	—	○	04610001	
Drum Twin Head Rail (4 m)		White	○	—	04620001	
Slide-in Velcro (50 m)			○	○	01320263	
Universal Bracket Twin Universal Bracket		White	—	○	04610002	
		White	○	—	04620002	
End Cap		White	—	○	04610004	
Drum Twin End Cap		White	○	—	04620016	
RS Loop Ball Chain TO-0748		L=1500 mm	White	○	—	04610046
		L=2000 mm	White	○	—	04610047
		L=2500 mm	White	○	—	04610048
Ball Chain Joint		White	—	○	04610017	
Clutch		White	○	○	04610040	
Coiling Drum		White	○	○	04610006	
Pulley		White	—	○	04610005	
Drum Twin One Chain Pulley		Right	White	○	—	04610042
		Left	Steel	○	—	04610043
Shaft		3 m	Steel	○	○	04610018
		4 m	Steel	○	○	04610041
Speed Controller N		White	○	○	30001920	
Lift Cord (1.2 mm) TO-0712					01320275	